


TRUXPORT® 2007 TOYOTA TUNDRA WITH TRAC SYSTEM INSTRUCTIONS

Item	Part #	Description
1.	1703530	Male Clamp
2.	1703904	Female Track
3.	1703925	5/16-18 Cap Screw


1. 1703530 Male Clamp
2. 1703904 Female Track
3. 1703925 5/16-18 Cap Screw

(1703926 Six Assembled Clamps)

Refer to Owner's Manual for complete instructions.

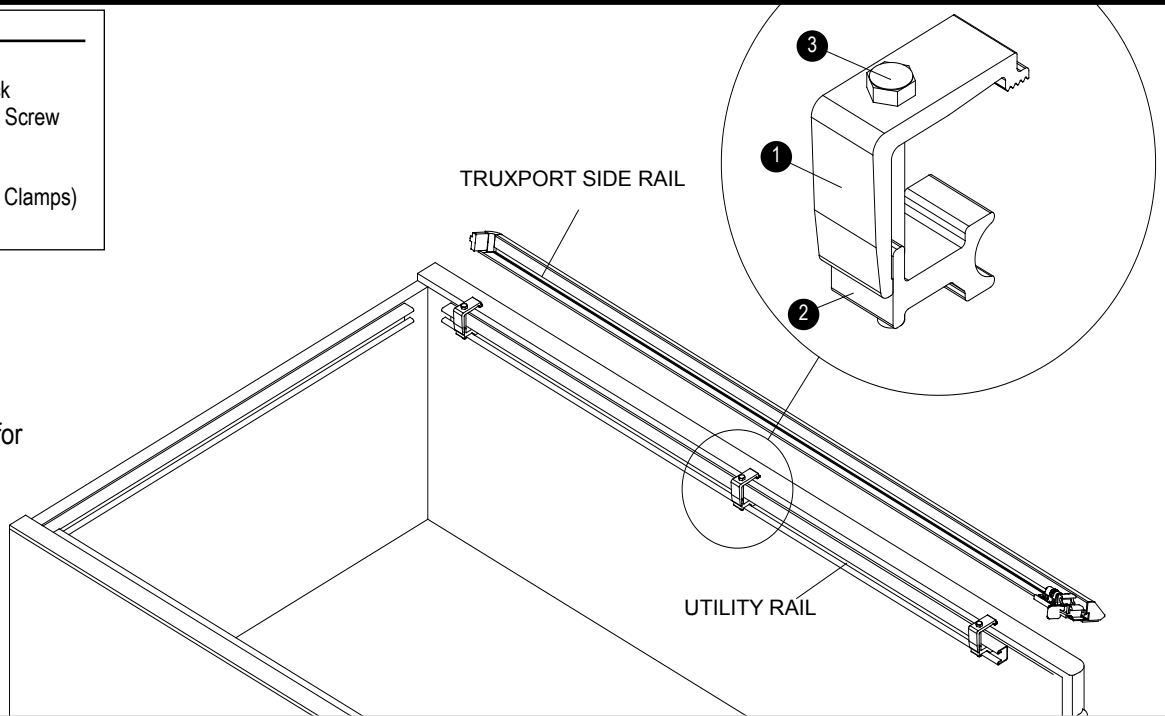


STEP 1: Insert clamp assemblies into utility rails, three on each side of pickup bed.

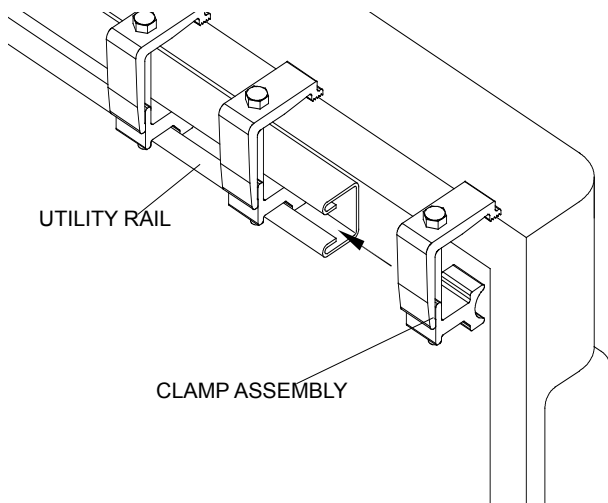

STEP 2: Evenly space 3 clamp assemblies along utility rail.

STEP 3: Refer to owner's manual for side rail placement.

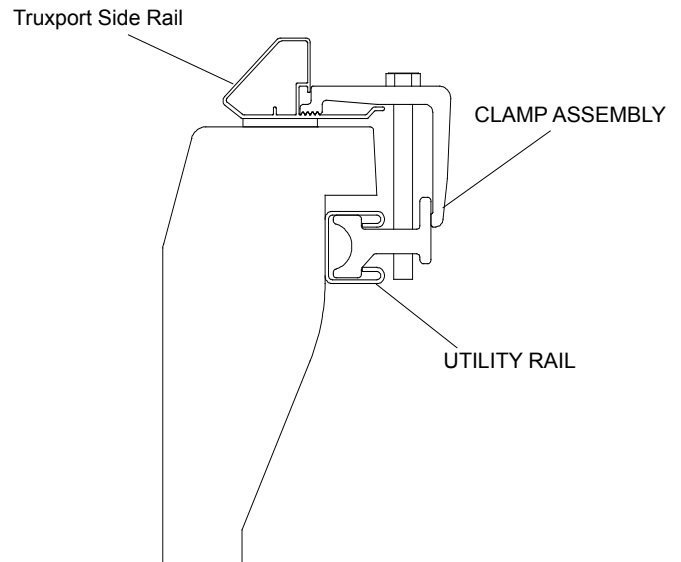

⚠ CAUTION

Tighten clamp assemblies securely on side rails before driving vehicle.

NOTE: See Owner's Manual for cover installation.

TRUXEDO

P.O. Box 713, 2209 Kellen Gross Dr., Yankton, South Dakota 57078
 Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com>

TRUXPORT

Another Fine Tonneau Cover by Truxedo

P/N 1117387 Rev. A