


01-03 Ford SuperCrew Bulkhead Seal Installation

STEP 1: Pull the orange backing strip away from the back of seal. Only pull orange strip part ways. Start applying seal in the front corner of bulkhead. Then apply the seal along the entire length of the trucks front bulkhead. Make sure the top of seal is flush with the top of the trucks plastic bed caps.

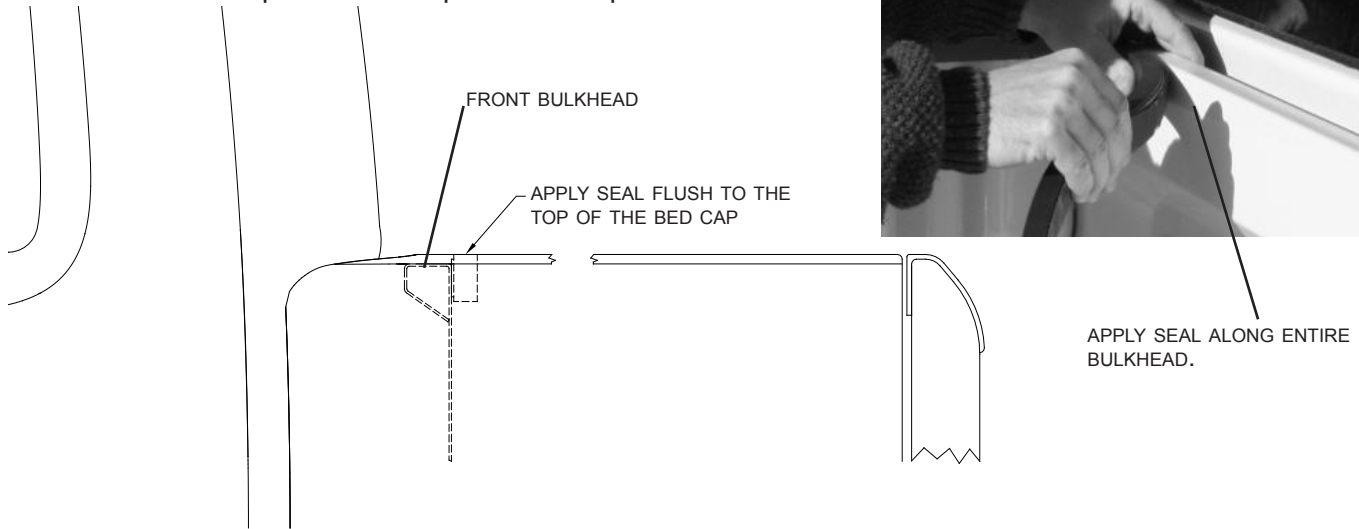

STEP 2: For best cover placement and fit, place the front header partially over the bulkhead seal that was just applied. The rear header and header seal will only have one seal fin fully engaged on the top of the tailgate. Refer to owners manual for complete installation instructions.

