



# NOTICE

## ASSEMBLY OF DODGE RAMBOX™ COVER TO TRUCK

**STEP 1.** Remove the end cap from the driver side cargo rail.

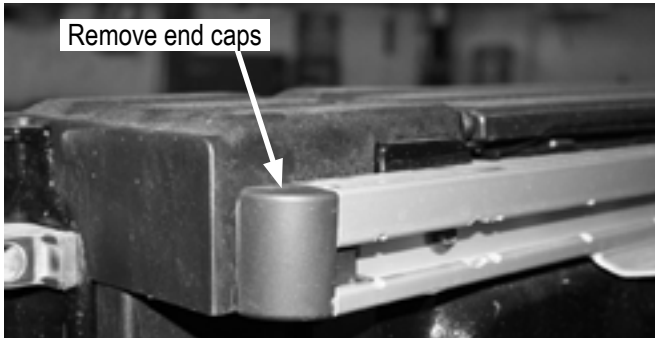


**STEP 2.** Assemble hardware as shown.

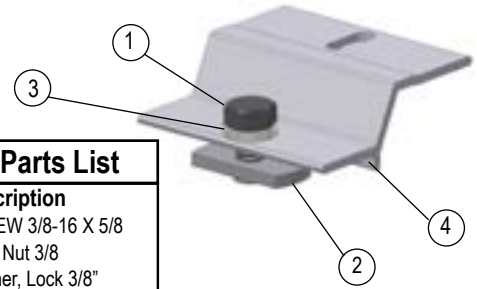


### Replacement Parts List

Item	Part #	Description
1.	1704353	SCREW 3/8-16 X 5/8
2.	1704373	Weld Nut 3/8
3.	1704374	Washer, Lock 3/8"
4.	1704246	Clamp Bracket Rambox


**STEP 3.** Slide three assembled brackets into each track of the driver and passenger side cargo rail.

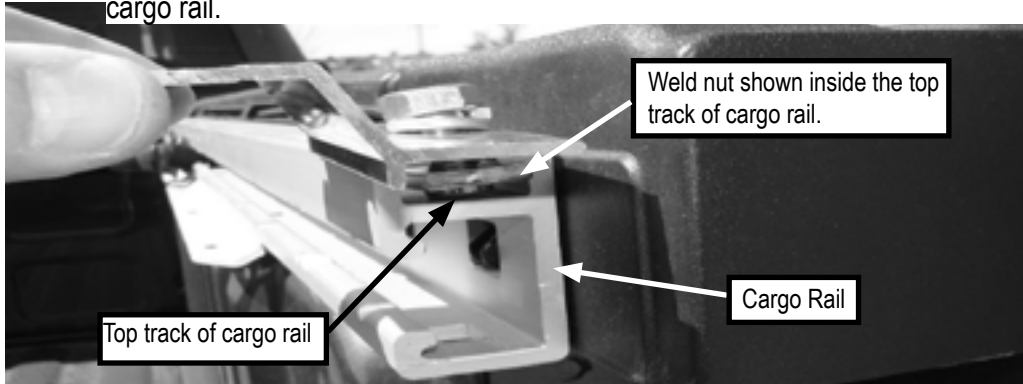


**STEP 4.** Apply corner seal to front inside corner of box.

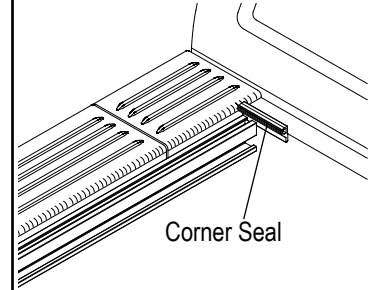

**STEP 5.** Starting from the front bulkhead of the Rambox™ place brackets at the dimensions shown and then tighten.

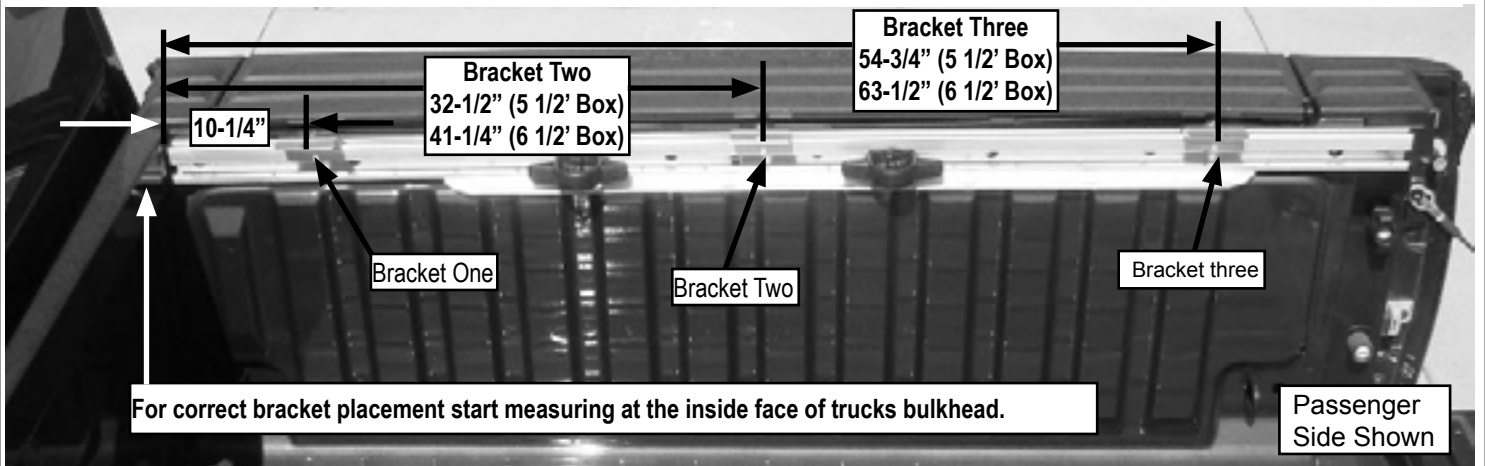

**STEP 6.** Fasten the Lo Pro QT rail to the brackets with the hardware shown.

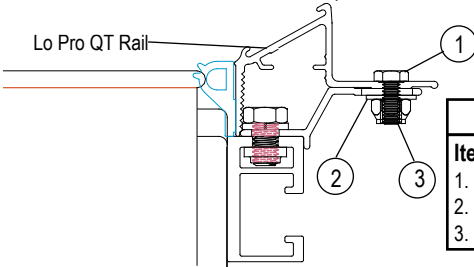

### Replacement Parts List

Item	Part #	Description
1.	1703852	SCREW 1/4-20 X 5/8
2.	1700427	Washer 1/4
3.	1701543	Nut 1/4-20

**STEP 7.**

Follow steps 1 through 6 to mount the driver side rail. After the side rails are attached insert the plastic cargo rail end caps. Refer to the owners manual for instructions on how to attach the cover assembly and for other operations of the tonneau cover.